

# RocketPort<sup>®</sup> PCI Hardware Installation

---

## Introduction

---

This *Hardware Installation* document discusses the following information:

- Product overview
- [RocketPort terminology](#)
- [Before installing the hardware](#)
- [Installing the hardware](#)
- [Interface overview](#)
- Interface connectors and building loopback plugs
  - = [DB9](#)
  - = [DB25](#)
  - = [RJ45](#)
- [Hardware specifications](#)
- [FCC notices](#)
- [Troubleshooting and creating diagnostics](#)
- [Contacting Technical Support](#)

---

## Product Overview

---

The RocketPort PCI series multiport serial card fits into the PCI slot of a personal computer, and uses a 36 MHz processor specifically designed to process asynchronous serial communications.

The RocketPort PCI series uses Application Specific Integrated Circuits (ASICs) technology to replace most hardware components, including:

- The processor
- Serial controller
- Bus interface logic and other miscellaneous logic

To eliminate memory mapping conflicts, the RocketPort PCI series is I/O mapped.

This *Hardware Installation* document discusses the following RocketPort PCI-bus serial controllers:

| Name       | Ports | Interface Type   |
|------------|-------|--|
| 4J         | 4     | This model has four male RJ45 jacks on the mounting bracket. Cables are not included.  |
| Quadcable* | 4     | Includes a fanout cable with standard DB25 or DB9 connectors.  |
| 8**        | 8     | Requires one 8-port interface box.   |
| Octacable  | 8     | Includes a fanout cable with standard DB25, DB9, or RJ45 connectors.   |
| 16**       | 16    | Requires one 16-port DB25 connector interface box, or one RM16-RJ45 Rack Mount interface box.  |
| 32**       | 32    | Requires two 16-port DB25 interface boxes, or two 16-port RM16-RJ45 Rack Mount interface boxes, or one RM32-RJ45 Rack Mount interface box. |

\* *Quadcables have the capability to be 8-port cards with an 8-port interface. Some drivers view the 4-port as an 8-port card.*

\*\* *For interface information, see the [RocketPort Interface Overview](#) discussion.*

All RocketPort PCI series interfaces support RS-232. There are also models available that support RS-422. You can install up to four RocketPort PCI cards in one PC, for a total of 128 additional serial ports, and you can install a combination of PCI-bus and ISA-bus RocketPort cards.

For driver installation, see the [software installation and configuration](#) documentation or the driver readme file for your operating system.

**Note:** *Red underlined text denotes URL jumps.*

---

## RocketPort Terminology

---

For the purposes of the following discussions, these products are referred to as “RocketPort ISA” cards:

- RocketPort ISA-bus boards (any interface type including 4J, 8J, Quadcable, and Octacable)
- RocketPort 485

These products are referred to as “RocketPort PCI” cards:

- RocketPort PCI-bus boards (any interface type including 4J, Quadcable, and Octacable)
- RocketPort *Plus*
- RocketPort PCI 422

---

## Before Installing the Hardware

---

Read this subsection:

- *If you already have one or more RocketPort ISA cards installed in your system.*
- *If you plan to install a combination of RocketPort ISA and RocketPort PCI cards at this time.*

### **Existing RocketPort ISA Cards Installed:**

You must deconfigure and remove any existing RocketPort ISA cards before installing RocketPort PCI cards. After you have successfully installed the RocketPort PCI cards, reinstall the RocketPort ISA cards.

### **Explanation:**

I/O addressing for RocketPort PCI cards is handled automatically by the computer’s BIOS when you first power up the computer after installing the cards.

I/O addresses for RocketPort ISA cards are set manually using DIP switches on the card. If you install an ISA card *before* installing a RocketPort PCI card, the ISA card addressing may interfere with the computer’s ability to recognize the RocketPort PCI card which may prevent the PCI card from functioning properly.

### **Additional Considerations:**

If you are mixing RocketPort ISA and PCI cards, set the DIP switches on the ISA cards so that the first ISA card that you install is the “first” card for I/O addressing purposes, even if it is physically the second, third, or fourth card that you install.

---

## Installing the RocketPort Hardware

---

Hardware installation consists of:

- Installing the card in the system.
- Connecting the peripherals.

**Note:** *After installing the hardware, you must install the device driver for your operating system.*

Use the following procedure to install the card.

**Note:** *If you are installing PCI and ISA RocketPort cards, install the PCI cards and driver before installing and configuring the ISA cards. See the [software installation and configuration](#) documentation or the driver *readme* file for information.*

1. Turn off your computer.
2. Remove the system cover.
3. Select a PCI expansion slot.
4. Remove the slot cover.

**Note:** *You may want to write down the model number and serial number of the card before installation.*

5. Insert the card into the slot, seating it securely.
6. Reinstall the expansion slot retaining screw.
7. Attach the interface that came with your card using the appropriate procedure:

### **If installing a Quad/Octacable:**

- a. Attach the male end of the Quadcable or Octacable to the card.
- b. Tighten the retaining screws.

**Note:** *Quad and Octacable models support RS-232 exclusively.*

- c. Go to Step 8 to complete the installation.

### **If installing a standard interface box:**

- a. Attach the male end of the RocketPort cable to the card and the female end to the connector labeled **Host** on the interface box.

**Note:** *The male DB25 port labeled Host is reserved for Control use and no user accessible signals are present at this port.*

- b. Tighten the retaining screws.

**Note:** *If you have a RocketPort 32, the connector labeled J1 corresponds to Ports 0—15 and the connector labeled J2 (closest to the bus) corresponds to Ports 16—31.*

- c. If applicable, use the slide switches on the interface box to set each port to either RS-232 or RS-422.
- d. Go to Step 8 to complete the installation.

### If installing a rack mount interface box:

The RM16-RJ45 and RM32-RJ45 are sturdy enough to allow you to stack several units on a shelf, or you can mount it directly into a rack.

Make sure that you have installed the RocketPort card or cards before connecting a rack mount interface.

a. Optionally:

- place the unit on a stable surface, or
- attach the L brackets to the interface using the screws supplied with the unit, and attach the L bracket into your rack



**Note:** You can mount the unit facing in either direction.



- b. Optionally, for the RM16-RJ45, attach the 10-foot cable to the RM16-RJ45 interface or 3-foot cable to the RocketPort card, or attach the 3-foot and 10-foot cables together.

**Note:** The cables are interchangeable. You may connect either or both cables depending upon the distance between the card and the rack. The maximum distance permitted between the interface box and card is 15 feet.

- c. Optionally, for the RM32-RJ45, attach the two cables to the card and the interface. The connector labeled J1 corresponds to Host A (Ports 0 - 15), and the connector labeled J2 (closest to the bus) corresponds to Host B (Ports 16 - 32).



**Do not** connect 16-port adapters located in different machines to the RM32-RJ45. It is possible to damage the interface and adapter card if the interface is connected to two PCs using separate line power sources.

8. Connect your peripheral devices.
9. Use the [software installation and configuration](#) documentation or device driver [readme](#) file to install the driver to complete your installation.

## RocketPort Interface Overview

The RocketPort series provides several interface options:

- Quadcable and Octacable fanout cables, which are available with the following configurations:
  - Quadcable DB25 and DB9.
  - Octacable DB25, DB9, and RJ45.

**Octacable  
DB9**




**Quadcable  
DB25**




**Note:** The RJ45 cable is not displayed.

- Standard interface boxes are available in several configurations:
  - RS-232 mode-only or switch-selectable RS-232/422; both models have female DB25 connectors.
  - Surge interface box that is switch-selectable RS-232/422 with male DB25 connectors

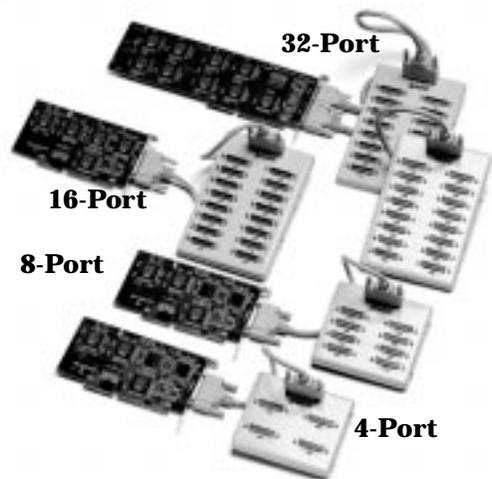

**Note:** RS-422 supports up to 10 multidrop devices.

- Rack Mount Models are available with RJ45 connectors (back panels shown).
  - 16 Port RS-232
  - 16 Port RS-422



- 32 Port RS-232 with status LEDs. The yellow LEDs show receiving activity. The green LEDs show transmitting activity.



- RocketPort 4J (RJ45):




## DB9 Interface Connectors

There are Quadcable and Octacable models available with DB9 connectors on a fanout cable.

### DB9 Pinouts

Use this table and figure for information about the DB9 connectors used on the Quadcable and Octacable.

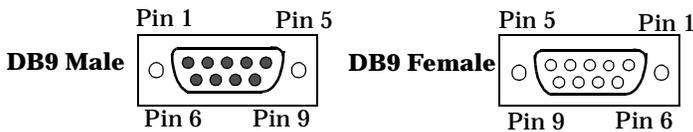


| Pin | DB9M RS-232 Signal |
|-----|--------------------|
| 1   | CD                 |
| 2   | RxD                |
| 3   | TxD                |
| 4   | DTR                |
| 5   | Signal GND         |
| 6   | DSR                |
| 7   | RTS                |
| 8   | CTS                |
| 9   | Not Used           |

## Building DB9 Female Loopback Plugs

Loopback plugs are used with the diagnostics to test serial ports.

This loopback is used with the Quadcable and Octacable. Wire the following pins together:

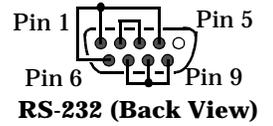


- Pins 1 to 4 to 6
- Pins 2 to 3
- Pins 7 to 8 to 9

## DB25 Interfaces

Use the following subsections for DB25 interface connectors. Standard interface boxes use female DB25 connectors, while the Surge interface box, Quadcable, and Octacable fanouts use male connectors.

### DB25 Pinouts

The following figures and table illustrate connector information for DB25 connectors.

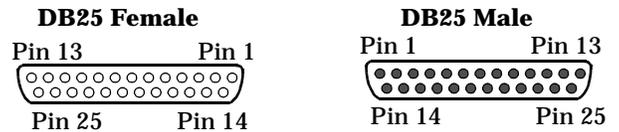

| Pin      | RS-232 Signal | RS-422 Signal  |
|----------|---------------|----------------|
| 1        | Not used      | Not used       |
| 2        | TxD           | Not used*      |
| 3        | RxD           | Not used*      |
| 4        | RTS           | Not used*      |
| 5        | CTS           | Not used*      |
| 6        | DSR           | Not used*      |
| 7        | Signal ground | Signal ground* |
| 8        | DCD           | Not used*      |
| 9 to 14  | Not used      | Not used       |
| 15       | Not used      | RxD+           |
| 16       | Not used      | Not used       |
| 17       | Not used      | RxD-           |
| 18       | Not used      | Not used       |
| 19       | Not used      | TxD+           |
| 20       | DTR           | Not used*      |
| 21 to 24 | Not used      | Not used       |
| 25       | Not used      | TxD-           |

\* All RS-232 signals are present in RS-422 mode. The Quad/Octacables do not support RS-422 mode.

## Building DB25 Female Loopback Plugs



Loopback plugs are used with the diagnostics to test serial ports.

This loopback is used with Quadcable, Octacable, and the Surge interface boxes. Wire the following pins together for an RS-232 plug.

- Pins 2 to 3
- Pins 4 to 5 to 22
- Pins 6 to 8 to 20

Wire the following pins together for an RS-422 loopback plug (Surge interface box).

- Pins 15 to 19
- Pins 17 to 25

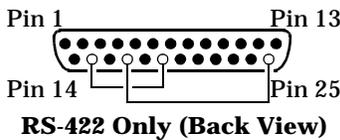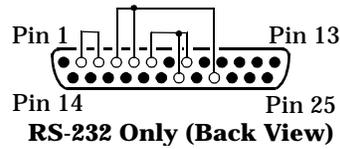

## Building DB25 Male Loopback Plugs



Loopback plugs are used with the diagnostics to test serial ports.

This loopback plug is used with the standard 8- and 16-port DB25 interface boxes.

- Pins 2 to 3
- Pins 4 to 5 to 22
- Pins 6 to 8 to 20

Wire the following pins together for an RS-422 loopback plug.

- Pins 15 to 19
- Pins 17 to 25

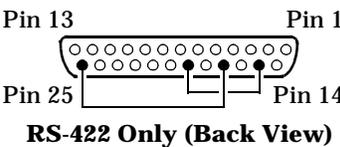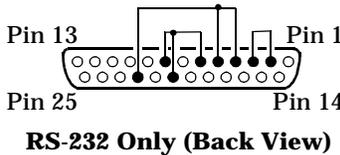


## RJ45 Interfaces

The RocketPort 4J, an Octacable model, and the Rack mount interface box use RJ45 connectors.

### RJ45 Pinouts

Use the following table and figures for pinout information on the RJ connectors used on the Octacable and Rack Mount interface boxes.

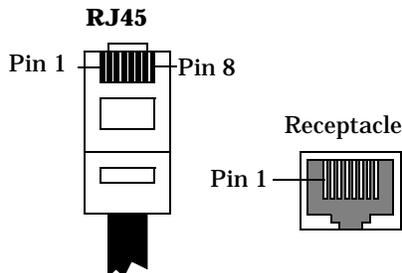

| Pin | RJ45      |           |
|-----|-----------|-----------|
|     | Model 232 | Model 422 |
| 1   | RTS       | TxD+      |
| 2   | DTR       | Not used  |
| 3   | GND       | Not used* |
| 4   | TxD       | TxD-      |
| 5   | RxD       | RxD-      |
| 6   | DCD       | Not used  |
| 7   | DSR       | Not used  |
| 8   | CTS       | RxD+      |


\* Pin 3 is tied to ground on the board, but is not used in the cable.

## Building RJ45 Loopback Plugs

Loopback plugs are used with the diagnostics to test serial ports.

This RJ45 loopback is used with the Octacable and Rack Mount interfaces.

- Pins 4 to 5
- Pins 1 to 8
- Pins 2 to 6 to 7

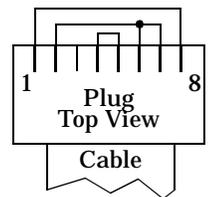

## Specifications

The following tables illustrate RocketPort conditions and specifications.

| Environmental Condition                               | Value                    |
|---|--------------------------|
| Air temperature:<br>System on<br>System off           | 0 to 40°C<br>-20 to 85°C |
| Humidity (non-condensing):<br>System on<br>System off | 8% to 80%<br>20% to 80%  |
| Altitude  | 0 to 10,000 feet         |

| Electromagnetic Compliance   | Status |
|--|--------|
| Emission:<br>Canadian EMC requirements<br>CISPR-22/EN55022 Class A*<br>FCC PART 15: Class A* | Yes    |
| Immunity:<br>EN50082: 801-2 ESD, 801-3 RF,<br>801-4 FT                                       | Yes    |
| UL Recognized  | Yes    |

\* The RocketPort PCI/4J controller meets Class B emission standards.

| RocketPort PCI Card   | Specification   |
|---|---|
| Baud rate:<br>RS-232 DTE (4J, Quad/<br>Octacable models)                                  | 50 to 460.8K baud<br>(without interface box)                                      |
| RS-232/422 (models<br>with interface box)   | 50 to 230.4K baud<br>(with interface box)   |
| <i>Note: Baud rate is dependent upon hardware and<br/>operating system configuration.</i> |   |
| Bus interface   | PCI   |
| Control by device driver:<br>Data bits<br>Parity<br>Stop bits                             | 7 or 8<br>Odd, Even, None<br>1 or 2   |
| Current consumption:  | <i>+5V</i> <i>+12V</i> <i>-12V</i>  |
| 4J  | 200 mA    50 mA    10 mA  |
| Quadcable   | 410 mA    100 mA    160 mA  |
| Octacable   | 440 mA    100 mA    160 mA  |
| RocketPort 8  | 600 mA    110 mA    160 mA  |
| RocketPort 16   | 940 mA    220 mA    320 mA  |
| RocketPort 32   | 2.9 A    440 mA    0  |
| Dimensions:   |   |
| 4J  | 5.1" by 4.2"  |
| Quad/Octacable  | 5.6" by 4.2"  |
| 8/16-Port   | 6.875" by 4.21"   |
| 32-Port   | 7.2" by 4.2"  |
| Heat output:  |   |
| 4J  | 5.87 BTU/Hr   |
| Quadcable   | 17.6 BTU/Hr   |
| Octacable   | 18.2 BTU/Hr   |
| 8-Port  | 27.1 BTU/Hr   |
| 16-Port   | 49.4 BTU/Hr   |
| 32-Port   | 67.4 BTU/Hr   |
| I/O ports/expansion slot  | From 4 to 32  |
| Interfaces:   |   |
| All models  | RS-232  |
| With optional switch-<br>selectable interface box   | RS-422  |
| Interrupt ( <i>software<br/>selectable</i> )  | None, 3, 4, 5, 9, 10, 11, 12, 15  |
| Mean time between<br>failures (MTBF):   |   |
| 4J  | 103.4 Years   |
| Quad/Octacable  | 23.5 Years  |
| 8-Port  | 60.7 Years  |
| 16-Port   | 45.6 Years  |
| 32-Port   | 17.4 Years  |
| RocketPort cards/system   | 4   |
| Surge protection<br>with standard and rack<br>mount interface boxes                       | Provides ESD surge<br>protection exceeding 10 KV.                                 |
| Surge protection<br>with Surge interface box  | Meets standard EIA-232-E<br>and provides ESD surge<br>protection exceeding 25 KV. |

| Surge Interface Box Operating Specifications |                  |
|--|------------------|
| Description                                  | Limit            |
| Maximum surge current (8x20uS)               | 100 amps (total) |
| Capacitance                                  | <350pf           |
| Clamping voltage                             | 30 volts         |
| Clamping response time                       | <5 nanoseconds   |
| Transient energy (10/1000 MS)                | 300 mJ           |
| Inductance                                   | <1.5 nh          |
| ESD withstand (surge-protection)             | 25KV             |

| Interface Box Type                     | Mounting Dimensions                   | Overall Dimensions                             |
|--|---------------------------------------|--|
| RS-232 only,<br>8-Port                 | 3.2" x 6.48"                          | 5.8" x 5.35" x 0.65"                           |
| RS-232 only,<br>16-Port                | 3.0" x 6.17"                          | 5.8" x 8.5" x 0.65"                            |
| RS-232<br>16-Port<br>(Rack Mount)      | 19" x 1.74" x 8.0"<br>(with brackets) | 16.75" x 1.74" x<br>8.0"<br>(without brackets) |
| RS-422<br>16-Port<br>(Rack Mount)      | 19" x 1.74" x 8.0"<br>(with brackets) | 17.25" x 1.74" x<br>8.0"<br>(without brackets) |
| RS-232<br>32-Port<br>(Rack Mount)      | 19" x 1.74" x 8.0"<br>(with brackets) | 17.25" x 1.74" x<br>8.0"<br>(without brackets) |
| RS-232/422,<br>4-Port                  | 3.2" x 6.48"                          | 5.8" x 5.35" x 0.65"                           |
| RS-232/422,<br>8-Port<br>(All models)  | 3.2" x 6.48"                          | 5.8" x 5.35" x 0.65"                           |
| RS-232/422,<br>16-Port<br>(All Models) | 3.0" x 6.48"                          | 5.8" x 8.5" x 0.65"                            |

## FCC Notices

### Radio Frequency Interference (RFI) (FCC 15.105)

This equipment has been tested and found to comply with the limits for Class A digital devices pursuant to Part 15 of the FCC Rules.

*Note: The RocketPort PCI/4J meets Class B requirements.*

This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.

- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Labeling Requirements (FCC 15.19)**

This equipment complies with Part 15 of FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

**Modifications (FCC 15.21)**

Changes or modifications to this equipment not expressly approved by Control Corporation may void the user's authority to operate this equipment.

**Serial Cables (FCC 15.27)**

This equipment is certified for Class A operation when used with shielded cables.

*Note: The RocketPort PCI/4J meets Class B requirements.*

**Troubleshooting and Running Diagnostics**

The first step to troubleshooting a problem is to determine that your RocketPort is functioning properly. To do so, you can create a bootable diskette.

You need two files to create a bootable floppy diagnostic diskette:

- The Rawrite utility that creates a bootable diagnostics diskette
- The diskette image file (\*.i).

You can find both files on the *Control Software and Documentation CD* or [download](#) them from the ftp site.

*Note: If you have the Control Software and Documentation CD, you can use the Quick Start Card for procedures for your operating system.*

**Creating a Bootable Diagnostics Diskette**

This discussion outlines how to create a bootable diagnostics diskette. You can use our Web site <ftp://ftp.control.com/bootdiag.htm> to:

- Download the necessary files.
- Easily find specific procedures for your operating system to create the bootable diskette.

**Diagnostics Overview**

After you create a bootable diagnostic diskette, you can use the diagnostic program to:

- Confirm that the hardware is functioning.
- Determine resolutions to conflicts during installation.
- Provide you with the ability to stress test the cards.

For example, you may want to run the diagnostics overnight to evaluate a possible problem. You will need loopback plugs for each port that you want to stress test. If you need additional loopback plugs, you can use the appropriate *Building Loopback Plugs* discussion in this document to build additional loopback plugs.

**Running the Diagnostics**

You can run the diagnostics using one of the following methods:

- Execute the **rocket.exe** file on the diskette in a native DOS environment.

*Note: The diagnostic occasionally fails when running in Windows MS-DOS® windows.*

- Boot the system from diagnostics diskette you created.

Use the following procedure to run the diagnostics:

1. Restart your machine in DOS mode or insert the diagnostics diskette.
2. Execute **rocket.exe** or start the machine. The diagnostic starts automatically.
3. Verify that the system locates the RocketPort card.
4. Follow the remainder of the on-line instructions.

If the diagnostics did not pass you may want to use the following discussion to diagnose your problem.

**Resolving Failures**

If the diagnostics could not find the card:

- Turn off the power and reseal the card into the slot.
- Check for proper cable connections.
- Check for proper installation of the loopback plug.

Try running the diagnostics again. If they fail again, you may have a bad port. [Contact Technical Support.](#)

**Technical Support**

Control has a staff of support technicians available to help you. Before you call, please have the following information available:

| Item   | Your System Information |
|--|-------------------------|
| Model number                                     |                         |
| Serial number                                    |                         |
| Interface type                                   |                         |
| Operating system type and release                |                         |
| Device driver version                            |                         |
| PC make, model, and speed                        |                         |
| List other devices in the PC and their addresses |                         |

| <b>Control</b> | <b>Headquarters</b>  | <b>Europe</b>  |
|----------------|--|--|
| Phone          | (763) 494-4100   | +44 (0)1869 323220   |
| FAX            | (763) 494-4199   | +44 (0)1869 323211   |
| E-mail         | <a href="mailto:support@control.com">support@control.com</a> | <a href="mailto:support@control.co.uk">support@control.co.uk</a> |
| Web support    | <a href="#">Searchable Solution Database and FAQs</a>        |  |
| Web site       | <a href="http://www.control.com">www.control.com</a>         | <a href="http://www.control.co.uk">www.control.co.uk</a>         |
| FTP site       | <a href="ftp://ftp.control.com">ftp.control.com</a>          |  |

Fourth Edition, March 20, 2001

Copyright © 1999 - 2001 Control Corporation

All Rights Reserved.

RocketPort is a registered trademark of the Control Corporation. Other product and company names mentioned herein may be the trademarks of their respective owners.

Control Corporation makes no representations or warranties with regard to the contents of this reference card or to the suitability of any Control product for any particular purpose. Specifications subject to change without notice. Some software or features may not be available at the time of publication. Contact your reseller for current product information.

**2000090 Rev. E**